




XRE-140

功能介绍

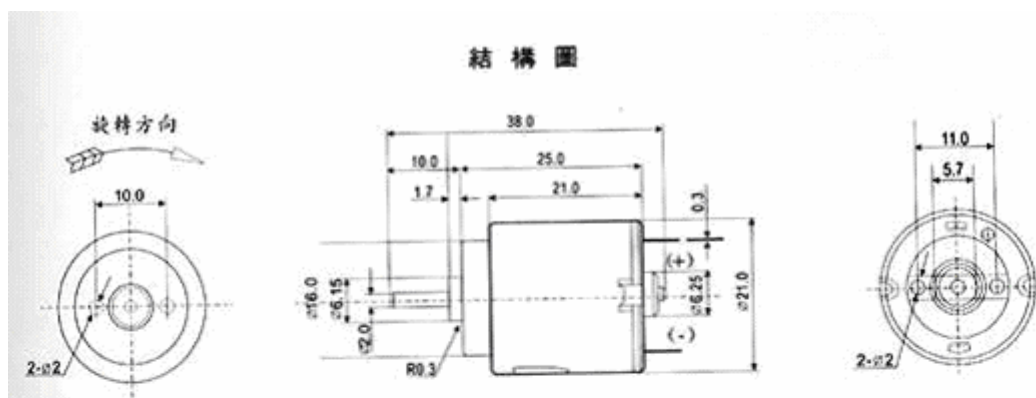

TECHNICAL PARAMETER

MODEL	VOLTAGE		NO LOAD		AT MAX EFFICIENCY					STALL	
	OPERATING RANGE	NOMINAL	SPEED	CURRENT	SPEED	CURRENT	TORQUE	OUTPUT	EFF	TORQUE	CURRENT
			rpm	A	rpm	A	g.cm	w	%	G.cm	A
XRE-140-2360	1.5~3.0V	3.0V	16500	0.28	13800	1.08	10.3	1.46	45	55	4.7
XRE-140-2270	1.5~3.0V	3.0V	14500	0.26	11740	1.07	10.2	1.34	41.7	52.5	4.10
XRE-140-1810	1.5~3.0V	3.0V	10500	0.16	8120	0.615	10.2	0.85	46.0	45	2.10
XRE-140-15160	1.5~4.5V	3.0V	7500	0.08	5800	0.274	6.78	0.4	49.0	30	0.94
XRE-140-13200	1.5~4.5V	3.0V	5800	0.05	4450	0.166	5.6	0.25	51.0	24	0.55
XRE-140-13180	3.0~4.5V	3.0V	6400	0.06	4860	0.2757	5.5	0.28	48.3	23	0.6
XRE-140-12240	3.0~4.5V	3.0V	4800	0.05	3470	0.157	5.53	0.2	41.75	20	0.41
XRE-140-10300	1.5~6.0V	6.0V	7500	0.04	4370	0.13	5.8	0.34	43.7	25	0.43
XRE-140S-2843	1.5~3.0V	3.0V	18700	0.46	15150	1.92	20.9	3.2	56.3	110	8.2
XRE-140S-13200	3.0~6.0V	3.0V	4300	0.05	3250	0.15	7.8	0.26	56.0	32	1.48

